


# USERGUIDE

## Lynx L110/ L210

Industrial Ethernet 10-port Switch



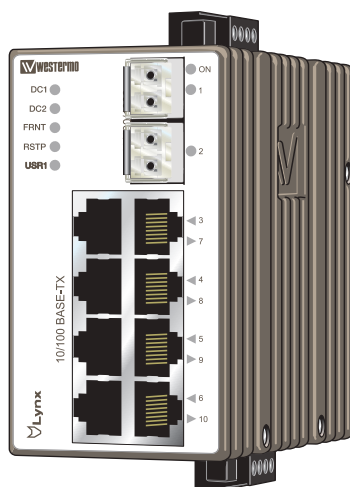

# General information

## Legal information

The contents of this document are provided “as is”. Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy and reliability or contents of this document. Westermo reserves the right to revise this document or withdraw it at any time without prior notice.

Under no circumstances shall Westermo be responsible for any loss of data or income or any special, incidental, and consequential or indirect damages howsoever caused.

More information about Westermo can be found at the following Internet address:  
[www.westermo.com](http://www.westermo.com)

## Software tools

Related software tools are available in the folder software tools under technical support on the Westermo website.

## License and copyright for included Free/Libre Open Source Software

This product includes software developed by third parties, including Free/Libre Open Source Software (FLOSS). The specific license terms and copyright associated with the software are included in each software package respectively. Please visit the product web page for more information.

Upon request, the applicable source code will be provided. A nominal fee may be charged to cover shipping and media. Please direct any source code request to your normal sales or support channel.

## WeOS Management Guide

This product runs WeOS (Westermo Operation System). Instructions for quick start, configuration, factory reset and use of USB port are found in the WeOS Management Guide at [www.westermo.com](http://www.westermo.com).

## Safety information

### Before installation:

Read this manual completely and gather all information on the unit. Make sure that you understand it fully. Check that your application does not exceed the safe operating specifications for this unit.

This unit should only be installed by qualified personnel.

This unit should be built-in to an apparatus cabinet, or similar, where access is restricted to service personnel only. The power supply wiring must be sufficiently fused, and if necessary it must be possible to disconnect manually from all power supply. Ensure compliance to national installation regulations. This unit uses convection cooling. Make sure that the unit is installed such as its ambient temperature is within its specified maximum/minimum temperature.



### Warning

Do not open connected unit. Hazardous voltage may occur within this unit when connected to power supply.

Note that this unit can be connected to two different power sources.

When this unit is operated at an ambient temperature above +55°C (+131°F), the External Surface of Equipment may exceed Touch Temperature Limit according to EN/IEC/UL 60950-1.

To reduce the risk of fire, use only No. 26 AWG or larger telecommunication line cord.

*For more information see General safety 100-5001.*

## Care recommendations

Follow the care recommendations below to maintain full operation of unit and to fulfill the warranty obligations.

- This unit must not be operating with removed covers or lids.
- Do not attempt to disassemble the unit. There are not any user serviceable parts inside.
- Do not drop, knock or shake the unit. Rough handling above the specification may cause damage to internal circuit boards.
- Do not use harsh chemicals, cleaning solvents or strong detergents to clean the unit.
- Do not expose the unit to any kind of liquids (rain, beverages, paint etc), unless all connectors and the ventilation membrane are sufficiently protected.
- Do not use or store the unit in dusty or dirty areas, unless all connectors and the ventilation membrane are sufficiently protected.

- Do not cover or bring mechanical force to the ventilation membrane on the back of the unit.

If the unit is not working properly, contact the place of purchase, nearest Westermo distributor office or Westermo Tech support.

## **Maintenance**

No maintenance is required, as long as the unit is used as intended within the specified conditions.

## **Environmental protection**

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice.

# Simplified EU declaration of conformity

Hereby, Westermo declares that the equipment is in compliance with EU directives. The full EU declaration of conformity and other detailed information are available at the respective product page at [www.westermo.com](http://www.westermo.com).

# Agency approvals and standards compliance

| Type          | Approval / Compliance                                              |
|---------------|--------------------------------------------------------------------|
| EMC           | EN 61000-6-1, Immunity residential environments                    |
|               | EN 61000-6-2, Immunity industrial environments                     |
|               | EN 61000-6-4, Emission industrial environments                     |
|               | EN 50121-4, Railway signalling and telecommunications apparatus    |
|               | IEC 62236-4, Railway signalling and telecommunications apparatus   |
| Safety        | UL/IEC/EN 60950-1, IT equipment                                    |
| Marine        | DNV GL rules for classification – Ships and offshore units*        |
| Environmental | NEMA TS 2, Traffic Controller Assemblies with NTCIP Requirements** |

\*Only Lx10-F2G (24-48 VDC)

\*\*Only Lx10-F2G-12VDC

## FCC Part 15.105 Notice:

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

## Corrosive environment Notice:

This product has been successfully tested in a corrosion test according to *IEC 60068-2-60, method 3*. This means that the product meets the requirements to be placed in an environment classified as *ISA-S71.04 class G3*.

**Note!** If the product is placed in a corrosive environment, it is important that all unused connector sockets are protected with a suitable plug in order to avoid corrosion attacks on the gold plated pins in connectors.

## Type tests and environmental conditions

| Environmental phenomena        | Basic standard                               | Description                     | Test levels                                                                                                                                                                                                                                                                  |
|--------------------------------|----------------------------------------------|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ESD                            | EN 61000-4-2                                 | Enclosure                       | Contact: $\pm 6$ kV    Air: $\pm 8$ kV                                                                                                                                                                                                                                       |
| Fast transients                | EN 61000-4-4                                 | Power port                      | $\pm 2$ kV                                                                                                                                                                                                                                                                   |
|                                |                                              | Signal ports                    | $\pm 2$ kV                                                                                                                                                                                                                                                                   |
|                                |                                              | Earth port                      | $\pm 1$ kV                                                                                                                                                                                                                                                                   |
| Surge                          | EN 61000-4-5                                 | Power port                      | L-E: $\pm 0.5$ kV, 12 $\Omega$ , 9 $\mu$ F<br>L-L: $\pm 0.5$ kV, 2 $\Omega$ , 18 $\mu$ F<br>L-E: $\pm 2$ kV, 42 $\Omega$ , 0.5 $\mu$ F<br>L-L: $\pm 2$ kV, 42 $\Omega$ , 0.5 $\mu$ F<br>L-E: $\pm 2$ kV, 12 $\Omega$ , 9 $\mu$ F<br>L-L: $\pm 1$ kV, 12 $\Omega$ , 9 $\mu$ F |
|                                |                                              | Signal ports                    | L-E: $\pm 1$ kV, 2 $\Omega$<br>L-E: $\pm 2$ kV, 42 $\Omega$ , 0.5 $\mu$ F                                                                                                                                                                                                    |
| Power frequency magnetic field | EN 61000-4-8                                 | Enclosure                       | 300 A/m; 0, 16.7, 50 Hz                                                                                                                                                                                                                                                      |
| Pulsed magnetic field          | EN 61000-4-9                                 | Enclosure                       | 300 A/m                                                                                                                                                                                                                                                                      |
| Radiated RF immunity           | EN 61000-4-3                                 | Enclosure                       | 10 V/m @ (80 – 800) MHz<br>20 V/m @ (800 – 1000) MHz<br>10 V/m @ (1400 – 2100) MHz<br>5 V/m @ (2100 – 2500) MHz<br>1 V/m @ (2500 – 2700) MHz<br>1 kHz sine, 80% AM                                                                                                           |
| Conducted RF immunity          | EN 61000-4-6                                 | Power port                      | 10 V, 80% AM, 1 kHz; (0.15 – 80) MHz                                                                                                                                                                                                                                         |
|                                |                                              | Signal ports                    | 10 V, 80% AM, 1 kHz; (0.15 – 80) MHz                                                                                                                                                                                                                                         |
|                                |                                              | Earth port                      | 10 V, 80% AM, 1 kHz; (0.15 – 80) MHz                                                                                                                                                                                                                                         |
| Radiated RF emission           | CISPR 16-2-3<br>ANSI C63.4<br>(FCC Part 15)  | Enclosure                       | Class A<br>Class A                                                                                                                                                                                                                                                           |
|                                |                                              |                                 |                                                                                                                                                                                                                                                                              |
| Conducted RF emission          | CISPR 16-2-1<br>ANSI C63.4<br>(FCC part 15b) | Power port                      | Class B                                                                                                                                                                                                                                                                      |
|                                |                                              | Signal ports                    | Class B                                                                                                                                                                                                                                                                      |
| Dielectric strength            | EN 60950-1                                   | Power port to all other ports   | 1.5 kVrms, 50 Hz, 1 min                                                                                                                                                                                                                                                      |
|                                |                                              | Signal ports to all other ports | 1.5 kVrms, 50 Hz, 1 min                                                                                                                                                                                                                                                      |

| Environmental                          |                              |                       |                                                                                                    |                                                             |
|----------------------------------------|------------------------------|-----------------------|----------------------------------------------------------------------------------------------------|-------------------------------------------------------------|
| Temperatures                           | EN 60068-2-1<br>EN 60068-2-2 | Operating             | Lx10-F2G:<br>-40 to +70°C (-40 to +158°F)*<br><br>Lx10-F2G-12VDC:<br>-40 to +74°C (-40 to +158°F)* |                                                             |
|                                        |                              | Storage and transport | -50 to +85°C (-58 to +185°F)                                                                       |                                                             |
| Humidity                               | EN 60068-2-27                | Operating             | 5 to 95 % relative humidity                                                                        |                                                             |
|                                        |                              | Storage and transport | 5 to 95 % relative humidity                                                                        |                                                             |
| Altitude                               |                              | Operating             | 2 000 m / 70 kPa                                                                                   |                                                             |
| Service life                           |                              | Operating             | 10 year                                                                                            |                                                             |
| Reliability prediction (MTBF)          | MIL-HDBK- 217F               | Operating             | 630 000 hours                                                                                      |                                                             |
| Vibration                              | IEC 60068-2-6<br>(sine)      | Operating             | 3-13.2 Hz: 1mm<br>13.2-100 Hz: 0.7 g                                                               | 5.5-30 Hz: 1.5 g<br>30-50 Hz: 0.42 mm<br>50-500 Hz: 4.2 g** |
| Shock                                  | IEC 60068-2-27               | Operating             | 30 g, 11 ms<br>100 g, 6 ms**                                                                       |                                                             |
| Bump                                   | IEC 60068-2-27               | Operating             | 10 g, 11 ms                                                                                        |                                                             |
| Packaging                              |                              |                       |                                                                                                    |                                                             |
| Enclosure                              | EN 60950-1                   | Zinc                  | Fire enclosure                                                                                     |                                                             |
| Dimension W x H x D<br>With connectors |                              |                       | 52.5 x 100 x 101 mm<br>52.5 x 119 x 101 mm                                                         |                                                             |
| Weight                                 |                              |                       | 0.7 kg                                                                                             |                                                             |
| Degree of protection                   | EN 60529                     | Enclosure             | IP 40                                                                                              |                                                             |
| Cooling                                |                              |                       | Convection                                                                                         |                                                             |

\* Refer to "Safety" section.

\*\* Might require Ethernet cables to be fastened close to the unit.



## Description

Lynx is an Industrial switch made for harsh environments. The switch can be used in either 100 Mbit or Gigabit networks due to our multi-rate SFP solution. Lynx can also be used together with our previous Lynx-series of switches. Our unique FRNT (Fast Recovery of Network Topology) technology is the fastest protocol on the market to re-configure a network in the event of any link or hardware failure. That is why Lynx is used in safety critical applications such as tunnels, traffic signal control and railway systems.

Installations in harsh environments and places with heavy electrical interference require the use of a reliable media. Lynx provides a number of solutions using fibre optic transceivers. Multi- or singlemode transceivers can be used to build point-to-point or redundant ring networks with ranges up to 120 km between each switch. Our BIDI transceiver, which transmits and receives data on a single fibre can be used in applications where the number of fibre cores are limited.

Real-time properties are implemented in the switch in order to achieve determinism for real time critical applications. Lynx supports QoS (Quality of Service) with four priority queues and strict priority scheduling as well as HoL (Head of Line Blocking Prevention). All to assure that the data network is deterministic.

## Interface specifications

| Power                            |                                                         |                                                                                   |
|----------------------------------|---------------------------------------------------------|-----------------------------------------------------------------------------------|
| Rated voltage                    | Lx10-F2G: 24 to 48 VDC<br>Lx10-F2G-12VDC: 12 to 48 VDC  |                                                                                   |
| Operating voltage                | Lx10-F2G: 19 to 60 VDC<br>Lx10-F2G-12VDC: 9.8 to 60 VDC |                                                                                   |
| Rated current                    | Lx10-F2G:<br>240 mA @ 24 VDC<br>120 mA @ 48 VDC         | Lx10-F2G-12VDC:<br>420 mA @ 12 VDC<br>220 mA @ 24 VDC<br>115 mA @ 48 VDC          |
| Rated frequency                  | DC                                                      |                                                                                   |
| Inrush current, I <sup>2</sup> t | Lx10-F2G:<br>22.7 mA <sup>2</sup> s @ 48 VDC            | Lx10-F2G-12VDC:<br>53 mA <sup>2</sup> s @ 12 VDC<br>20 mA <sup>2</sup> s @ 48 VDC |
| Startup current*                 | 2 x Rated current                                       |                                                                                   |
| Polarity                         | Reverse polarity protected                              |                                                                                   |
| Redundant power input            | Yes                                                     |                                                                                   |
| Isolation to                     | All other                                               |                                                                                   |
| Connection                       | Detachable screw terminal                               |                                                                                   |
| Connector size                   | 0.2 – 2.5 mm <sup>2</sup> (AWG 24 – 12)                 |                                                                                   |
| Shielded cable                   | Not required                                            |                                                                                   |

\* External supply current capability for proper start-up

| Ethernet TX              |                                                                                                                                          |
|--------------------------|------------------------------------------------------------------------------------------------------------------------------------------|
| Electrical specification | IEEE std 802.3. 2005 Edition                                                                                                             |
| Data rate                | 10 Mbit/s, 100 Mbit/s, manual or auto                                                                                                    |
| Duplex                   | Full or half, manual or auto                                                                                                             |
| Circuit type             | TNV-1                                                                                                                                    |
| Transmission range       | Up to 150 m with CAT5e cable or better*                                                                                                  |
| Isolation to             | All other                                                                                                                                |
| Connection               | RJ-45, auto MDI/MDI-X                                                                                                                    |
| Shielded cable           | Not required, except when installed in Railway applications as signalling and telecommunications apparatus and located close to rails.** |
| Conductive housing       | Yes                                                                                                                                      |
| Number of ports          | 8                                                                                                                                        |

\* Refer to Safety section.

\*\* To minimise the risk of interference, a shielded cable is recommended when the cable is located inside 3 m boundary or the cable is longer than 30 m and inside 10 m boundary to the rails and connected to this port.

| Ethernet SFP pluggable connections (FX or TX) |                                                          |
|-----------------------------------------------|----------------------------------------------------------|
| Electrical specification                      | IEEE std 802.3. 2005 Edition                             |
| Data rate                                     | 100 Mbit/s or 1000 Mbit/s transceivers supported         |
| Duplex                                        | Full or Auto, depending on transceiver                   |
| Transmission range                            | Depending on transceiver                                 |
| Connection                                    | SFP slot holding fibre transceiver or copper transceiver |
| Number of ports                               | 1 or 2                                                   |

| I/O / Relay output      |                                         |
|-------------------------|-----------------------------------------|
| Maximum voltage/current | 60 VDC / 80 mA                          |
| Contact resistance      | Max 30 $\Omega$                         |
| Isolation to            | All other                               |
| Connection              | Detachable screw terminal               |
| Connector size          | 0.2 – 2.5 mm <sup>2</sup> (AWG 24 – 12) |

| I/O / Digital input          |                                         |
|------------------------------|-----------------------------------------|
| Maximum voltage/load current | 60 VDC / 2 mA                           |
| Voltage levels               | Logic one: >12V<br>Logic zero: <1V      |
| Isolation to                 | All other                               |
| Connection                   | Detachable screw terminal               |
| Connector size               | 0.2 – 2.5 mm <sup>2</sup> (AWG 24 – 12) |

| Console                  |                                                     |
|--------------------------|-----------------------------------------------------|
| Electrical specification | TTL-level                                           |
| Data rate                | 115.2 kbit/s                                        |
| Data format              | 8 data bits, no parity, 1 stop bit, no flow control |
| Circuit type             | SELV                                                |
| Connection               | 2.5 mm jack, use only Westermo cable 1211-2027      |

## SFP Transceivers

### Supported transceivers

Firmware prior to 4.4.0 accepts Westermo branded transceivers only. From 4.5.0 other transceivers are accepted with a notice and the unit will no longer be UL approved. Temp.specifications are also depending on the used transceivers.


**Note:** To comply with UL60950-1 only UL recognized SFP transceivers should be used.

### Deviations

With copper transceiver 1100-0148 the specified operating temperature on Lynx is 0 to +50°C (32 to +122°F).

FRNT reconfiguration times can not be guaranteed with copper transceivers.

# Location of interface ports and LEDs

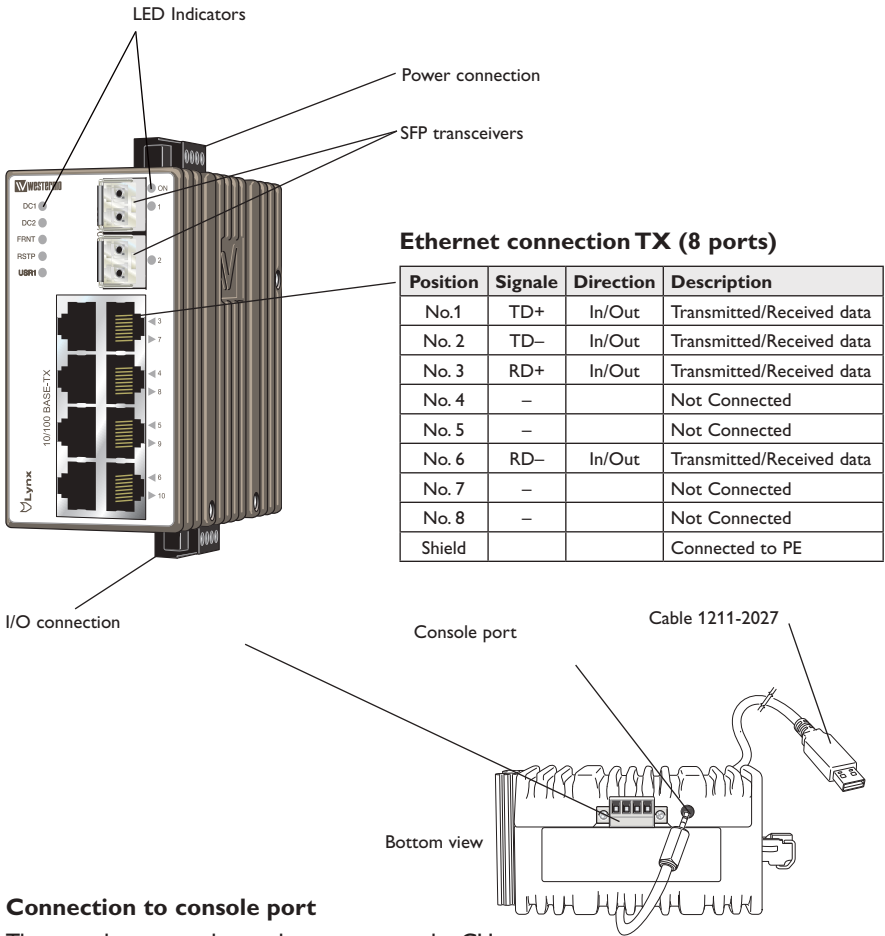

## Connection to console port


The console port can be used to connect to the CLI (Command Line Interface).

### The following steps needs to be taken

1. Connect the serial diagnostic cable to the console port (use only Westermo cable 1211-2077).
2. Connect cable to your computer (USB port, if drivers are needed they can be downloaded from our Web page).
3. Use a terminal emulator and connect with correct speed and format (115200, 8N1) to the assigned port.


For more information about the CLI, see the WeOS management guide.

Power connection

|  | 4-position | Product marking | Direction | Description              |
|-----------------------------------------------------------------------------------|------------|-----------------|-----------|--------------------------|
|                                                                                   | No. 1      | +DC1            | Input     | Supply voltage input DC1 |
|                                                                                   | No. 2      | +DC2            | Input     | Supply voltage input DC2 |
|                                                                                   | No. 3      | -COM            | Input     | Common                   |
|                                                                                   | No. 4      | -COM            | Input     | Common                   |


Lynx supports redundant power connection. The positive inputs are +DC1 and +DC2, the negative input for both supplies are –COM. Connect the primary voltage (e.g. +24 VDC) to the +DC1 pin and return to one of the –COM pins on the power input.

I/O connection

|  | 4-position | Product marking | Direction | Description                  |
|-----------------------------------------------------------------------------------|------------|-----------------|-----------|------------------------------|
|                                                                                   | No. 1      | Status +        | Output    | Alarm relay (status) contact |
|                                                                                   | No. 2      | Status –        | Output    | Alarm relay (status) contact |
|                                                                                   | No. 3      | Digital in +    | Input     | Digital in +                 |
|                                                                                   | No. 4      | Digital in –    | Input     | Digital in –                 |


The Status output is a potential free, opto-isolated normally closed solid-state relay. This can be configured to monitor various alarm events within the Lynx unit, see WeOS Management Guide. An external load in series with an external voltage source is required for proper functionality. For voltage/current ratings, see Interface Specification section.

The Digital in is an opto-isolated digital input which can be used to monitor external events. For voltage/current ratings, see Interface Specification section:

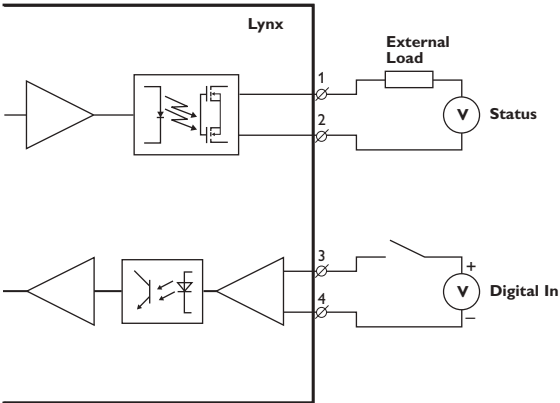

## LED indicators


| LED     | Status      | Description                                                                                                      |
|---------|-------------|------------------------------------------------------------------------------------------------------------------|
| ON      | OFF         | Unit has no power.                                                                                               |
|         | GREEN       | All OK, no alarm condition.                                                                                      |
|         | RED         | Alarm condition, or until unit has started up. (Alarm conditions are configurable, see "WeOS Management Guide"). |
|         | BLINK       | Location indicator ("Here I am!"). Activated when connected to IPConfig Tool, or upon request from Web or CLI.   |
| DC1     | OFF         | Unit has no power.                                                                                               |
|         | GREEN       | Power OK on DC1.                                                                                                 |
|         | RED         | Power failure on +DC1.                                                                                           |
| DC2     | OFF         | Unit has no power.                                                                                               |
|         | GREEN       | Power OK on DC2.                                                                                                 |
|         | RED         | Power failure on +DC2.                                                                                           |
| FRNT    | OFF         | FRNT disabled.                                                                                                   |
|         | GREEN       | FRNT OK.                                                                                                         |
|         | RED         | FRNT Error.                                                                                                      |
|         | BLINK       | Unit configured as FRNT Focal Point.                                                                             |
| RSTP    | OFF         | RSTP disabled.                                                                                                   |
|         | GREEN       | RSTP enabled.                                                                                                    |
|         | BLINK       | Unit elected as RSTP/STP root switch.                                                                            |
| USR1    | OFF         | Configurable, see WeOS Management Guide.                                                                         |
|         | GREEN       |                                                                                                                  |
|         | RED         |                                                                                                                  |
| 1 to 10 | OFF         | No Link.                                                                                                         |
|         | GREEN       | Link established.                                                                                                |
|         | GREEN FLASH | Data traffic indication.                                                                                         |
|         | YELLOW      | Port alarm and no link. Or if FRNT or RSTP mode, port is blocked.                                                |

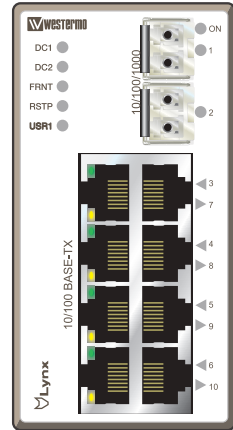

## Mounting

This unit should be mounted on 35 mm DIN-rail, which is horizontally mounted inside an apparatus cabinet or similar. It is recommended that the DIN-rail is connected to ground. Snap on mounting, see figure.


Mounting Lynx with integrated DIN-clip:

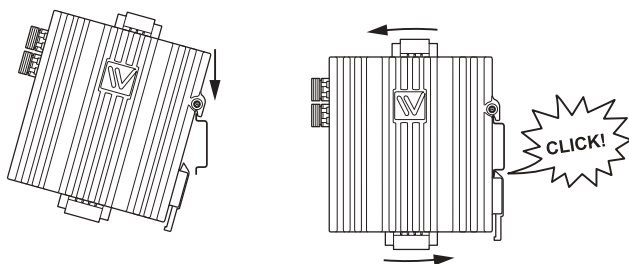

## Removal


Removing Lynx with integrated DIN-clip:

Press down the support at the back of the unit using a screwdriver. See figure.

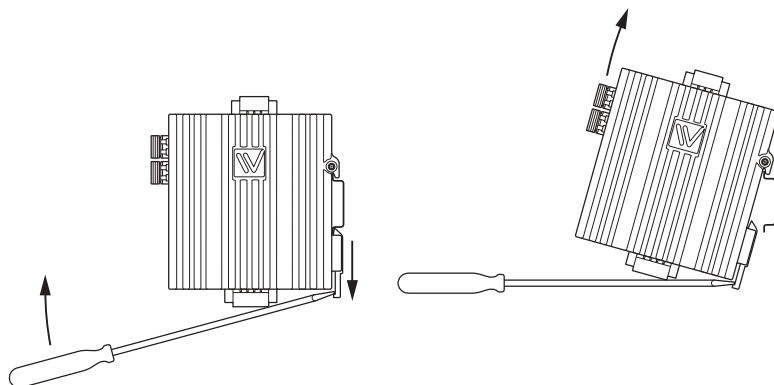

## Cooling

This unit uses convection cooling. To avoid obstructing the airflow around the unit, use the following spacing rules. Minimum spacing 25 mm (1.0 inch) above / below and 10 mm (0.4 inches) left / right the unit. Spacing is recommended for the use of unit in full operating temperature range and service life.

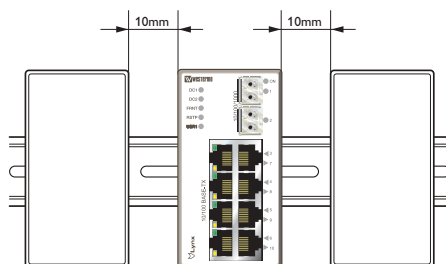

## Getting Started

This product runs Westermo Operating System (WeOS) which provides several management tools that can be used for configuration of the unit.

- **IPConfig tool**

This is a custom Westermo tool used for discovery of attached Westermo units.

- **Web**

Configuration of the unit using the web browser.

- **CLI**

Configuration of the unit via the Command Line Interface.

*Username:* admin

*Password:* westermo

If the computer is located in the same subnet as the switch you can easily use a web browser to configure the unit. Within the web you can configure most of the available functions.

For advanced network settings and more diagnostic information, please use the CLI. Detailed documentation is available in the chapter "The Command Line Management Tool" in the WeOS management guide.

|                 |                    |               |
|-----------------|--------------------|---------------|
| Factory default | <i>IP address:</i> | 192.168.2.200 |
|                 | <i>Netmask:</i>    | 255.255.255.0 |
|                 | <i>Gateway:</i>    | Disabled      |

**Note!** If you are not sure about the subnet – consult your network administrator.

## Configuration

### Configure the unit via Web browser

The unit can easily be configured via a Web browser.

Open the link <http://192.168.2.200> in your web browser, and you will be prompted with a Login screen, where the default settings for Username and Password are:

*Username:* admin

*Password:* westermo

Once you have logged in, you can use the extensive integrated help function describing all configuration options. Two common task when configuring a new switch is to assign appropriate IP settings, and to change the password of the admin account.

The password can be up to 64 characters long, and should consist of printable ASCII characters (ASCII 33-126); 'Space' is not a valid password character.

**Note!** Version of IP Config tool must be 10.3.0 or higher.



## Referring documents

| Type             | Description                  | Document number |
|------------------|------------------------------|-----------------|
| Management Guide | Westermo OS management guide | 6101-3201       |

## Factory default on Lynx

It is possible to set the unit to factory default settings by using two straight standard Ethernet RJ-45 cables.

1. Power off the switch and disconnect all Ethernet cables (copper and fibre).
2. Connect one Ethernet cable between Ethernet ports 3 and 10, and the other between Ethernet ports 6 and 7.  
The ports need to be connected directly by an Ethernet cable, i.e., not via a hub or switch. Use a straight cable – not a cross-over cable – when connecting the ports.
3. Power on the unit.
4. Wait for the unit to start up. Control that the ON LED is flashing red.

The ON LED flashing indicates that the unit is now ready to be reset to factory default.

You now have the choice to go ahead with the factory reset, or to skip factory reset and boot as normal.

- Go ahead with factory reset:

Acknowledge that you wish to conduct the factory reset by unplugging the Ethernet cables. The ON LED will stop flashing.

This initiates the factory reset process\*, and after approximately 1 minute the unit will restart with factory default settings. When the switch has booted up, the ON LED will show a green light, and is now ready to use.

- Skip the factory reset:

To skip the factory reset process, just wait for approximately 30 seconds (after the ON LED starts flashing RED) without unplugging the Ethernet cables. The switch will conduct a normal boot with the existing settings.

\* **Note** Do not power off the unit while the factory reset process is in progress.







Westermo • SE-640 40 Stora Sundby, Sweden  
Tel +46 16 42 80 00 Fax +46 16 42 80 01  
E-mail: [info@westermo.com](mailto:info@westermo.com)  
[www.westermo.com](http://www.westermo.com)